

Spare Part List & Exploded View

Liste des Pièces détachées et Vues éclatées

WIM-12323.MH

R32




Updated on: 17 OCT 23

WIM-12323.MH INDOOR UNIT - UNITE INTERIEURE**Spare parts list
Liste des pièces détachées**

N°	Part Name	Part Code	Qty	Qty to order
1	Panel Assembly	12122000A86975	1	
2	Filter Assembly	12100204000522	2	
3	Display Box Subassembly	17222000A68292	1	
3.1	Display Board Subassembly	17122000062267	1	
4	Cover Plate	12122000024739	1	
5	Panel Frame Assembly	12122000025543	1	
5.1	Screw Cap	12122000013139	1	
7	Cover Board For Wiring	12122000025064	1	
8	Louver Subassembly	12122000025544	1	
9	Evaporator Assembly	15822000010276	1	
10	Motor Cover	12122000029503	1	
11	Brushless Dc Motor	11002015012989	1	
13	Bearing Block Assembly	12622000000131	1	
14	Cross Flow Fan	12100102000576	1	
16	Chassis Assembly	12122000025628	1	
16.1	Chassis Assembly	12122000026444	1	
16.1.1	Stepper Motor	11002010000143	1	
16.1.2	Vortex Tongue Bar	12122000025629	1	
16.1.5	Anti Mouse Baffle	12122000024735	1	
16.1.6	Drain Hose	12100501000032	1	
16.1.7	Insulated Axis	12122000000344	1	
16.1.8	Stepper Motor	11002010A00014	1	
16.1.9	Drainage Plug	12622000000030	1	
16.3	Bearing Holder	12122000000350	1	
17	Pipe Clamp Board	12122000012943	1	
18	Installation Plate	12222000000018	1	
19	Electronic Control Box Subassembly (Mid-And Low-End)	17222000042833	1	
19.1	Cover Of Electronic Control Box(Bmc)	12122000025621	1	
19.3	Main Control Board Subassembly	17122000062270	1	
19.4	Room Temperature Sensor	11201007003424	1	
19.5	Pipe Temperature Sensor	11201007003447	1	
19.6	Wire Joint	17400401000576	1	
21	Remote Controller	17317000A67360	1	
22	Seal Ring	12600701000039	1	
23	Drain Hose	12100509000061	1	
40	Air Freshening Filter	12100204000685	1	
43	Ion Generator	17400609000580	1	
45	Bracket Of Remote Controller	12122000029201	1	
46	Copper Nut	15500406000010	1	
46	Copper Nut	15500406000016	1	
54	Wifi Module Assembly	17310900003166	1	

Exploded View - Vues éclatées

WIM-12323.MH OUTDOOR UNIT – UNITE EXTERIEURE

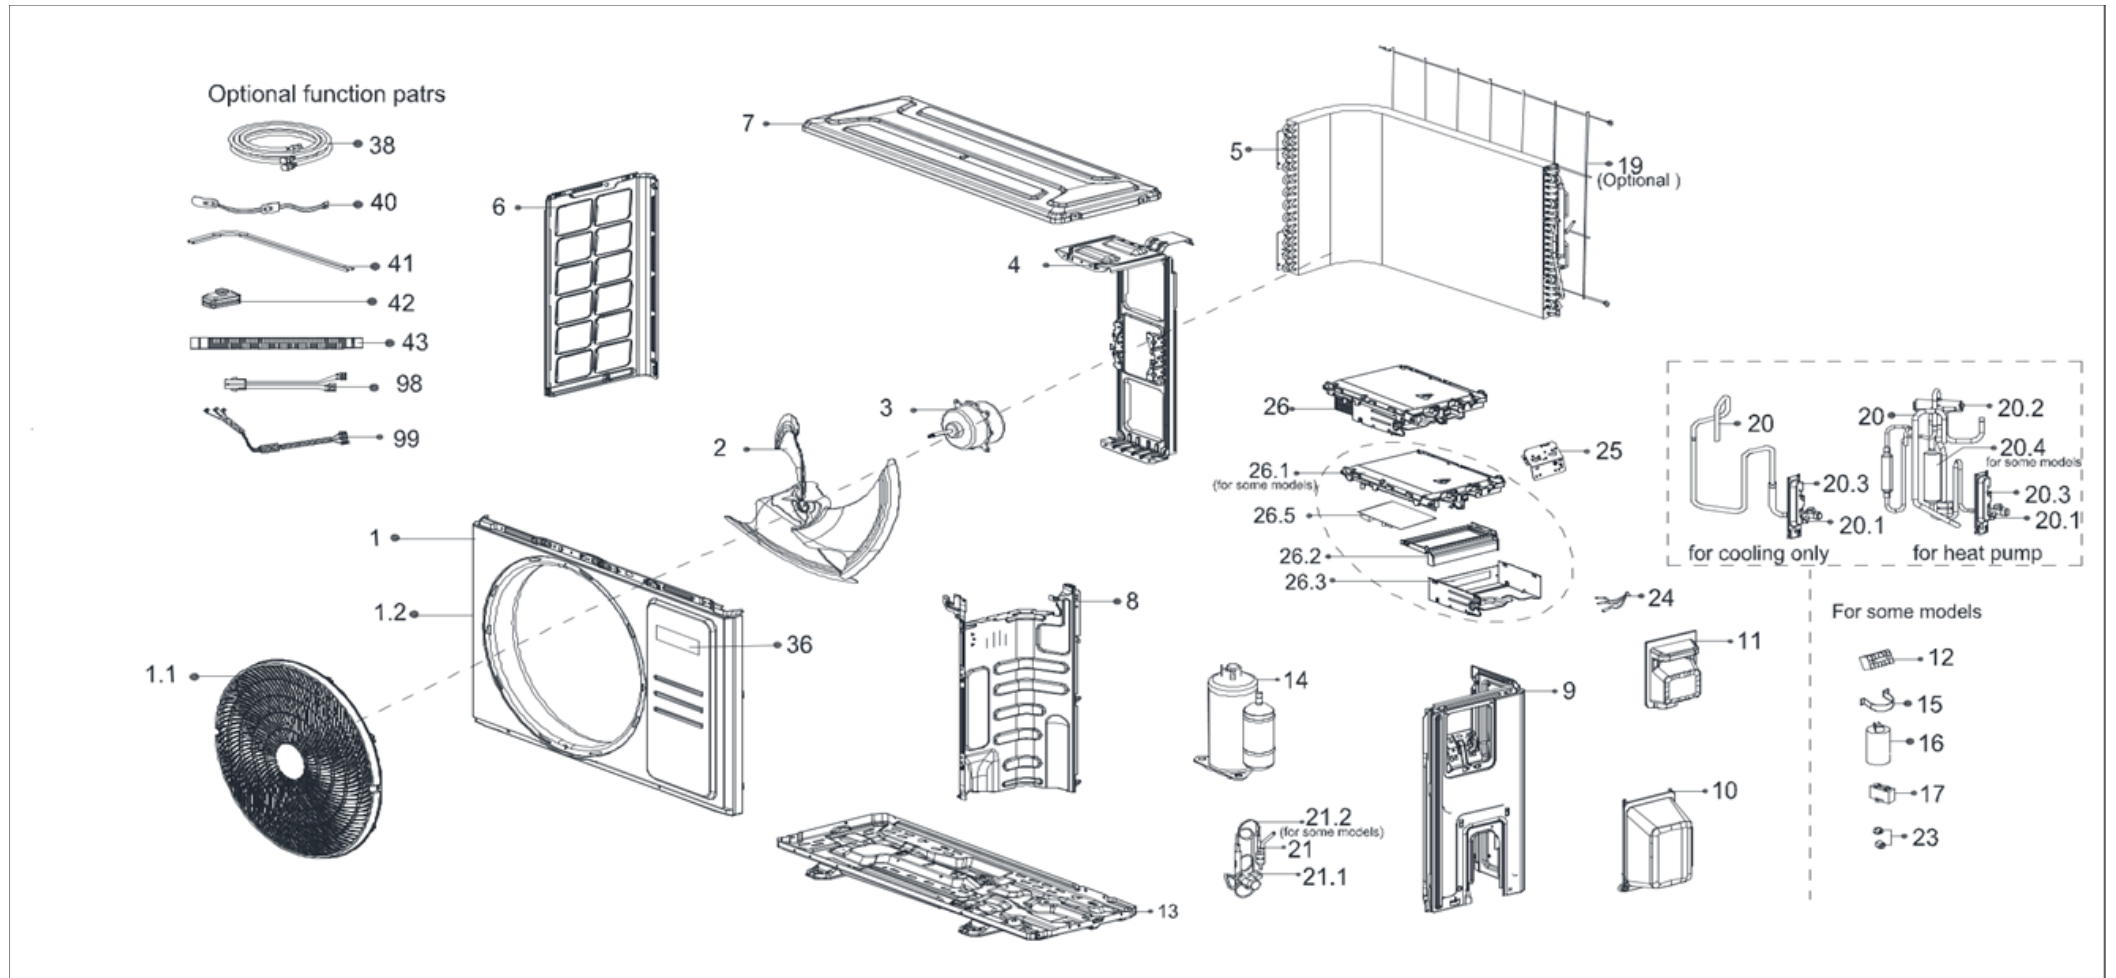

WIM-12323.MH OUTDOOR UNIT - UNITE EXTERIEURE**Spare parts list
Liste des pièces détachées**

N°	Part Name	Part Code	Qty	Qty to order
1	Front Panel Assembly	12222000013304	1	
1.1	Air-Out Mesh Enclosure	12122000026241	1	
1.2	Front Panel	12222000013305	1	
2	Axial Flow Fan	12100105000961	1	
3	Brushless Dc Motor	11002015012128	1	
4	Motor Bracket	12222000013233	1	
5	Condenser Assembly	15822000014035	1	
6	Left Side Panel	12222000013238	1	
7	Top Cover Assembly	12222000013240	1	
8	Partition Plate	12222000013232	1	
9	Right Clapboard Assembly	12222000013225	1	
10	Water Collector	12122000007150	1	
11	Big Handle Assembly	12122000031166	1	
12	Terminal	17400401000016	1	
13	Chassis Assembly	12222000013228	1	
14	Dc Inverter Rotary Compressor	11103020006759	1	
19	Rear Net	12222000015606	1	
20	4-Way Valve Assembly	15422000017852	1	
20.1	Gas Valve	15500204000021	1	
20.2	Four-Way Valve	15500216001903	1	
20.3	Valve Plate	12222200005738	1	
20.4	Muffler Subassembly	15122000026302	1	
21	Liquid Valve Assembly	15422000018812	1	
21.1	Liquid Valve	15500208000028	1	
23	Copper Nut	15500406000010	1	
23	Copper Nut	15500406000016	1	
24	Combination Sensor	11201011000067	1	
25	Terminal Board	12222000002259	1	
26	Electronic Control Box Subassembly	17222000033097	1	
26.2	Fixing Board	12122000024222	1	
26.3	Electronic Installing Box Subassembly	12222000012106	1	
26.5	Outdoor Main Control Board Subassembly	17122000060449	1	
36	Trademark	16022000B70273	1	
43	Drain Hose	12100509000059	1	
99	Compressor Wires Subassembly	17401203012697	1	

Specifications are subject to possible modifications without prior notice. Les présentes spécifications sont susceptibles d'être modifiées sans préavis. Las especificaciones están sujetas a cambios sin previo aviso